



MINI ME 2

USER MANUAL

KRUPS



TABLE OF CONTENTS

SAFETY PRECAUTIONS



MACHINE OVERVIEW



MACHINE STATUS OVERVIEW



RECOMMENDATIONS FOR SAFE USE



FIRST USE



BEVERAGE EXAMPLES



PREPARING A BEVERAGE



CLEANING



DESCALING



TROUBLESHOOTING



Read all instructions and keep these safety instructions. Any type of misuse of the appliance may result in a potential injury.

In case of any inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee may not apply.

The guarantee does not cover appliances that do not work or do not work properly because they have not been maintained and/or descaled.



INTENDED USE

1. This appliance is intended to be used in household only. It is not intended to be used in following applications, and the guarantee will not apply for:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
2. Your appliance is intended for domestic use inside the home only at an altitude below 3400 m.



ELECTRICAL POWER SUPPLY

3. Connect the appliance to a mains power socket with an earth connection only. Mains voltage must be the same as the details on the rating plate. The use of incorrect connection will negate the guarantee and may be hazardous.
4. To protect against fire, electric shock and injury to persons do not immerse the power cord, plugs or the appliance in water or other liquid. Avoid spillage on the plug. Never touch the power cord with wet hands. Do not overfill the water tank.
5. In case of an emergency remove the plug from the mains power socket immediately.
6. Unplug from the mains power socket when not in use.
7. To disconnect, remove the plug from the mains power socket. Do not unplug by pulling the cord.
8. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces or sharp edges. Do not allow the cord to dangle (risk of tripping up). Never touch the cord with wet hands.
9. Do not operate any appliance with a damaged cord or plug. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Do not operate any appliance that malfunctions or has been damaged in any manner. Unplug cord immediately. Return the damaged appliance to the nearest authorised service facility designated by the NESCAFÉ® Dolce Gusto® hotline.



10. If the mains power socket does not match the plug on the appliance, have the plug replaced with a suitable type by aftersales service centres designated by the NESCAFÉ® Dolce Gusto® hotline.



CONDITIONS OF USE

11. Always use the appliance on a flat, stable, heat resistant surface away from sources of heat or water splashes.
12. Do not use the appliance without the drip tray and drip grid, except when a very tall mug is used. Do not use the appliance for hot water preparation.
13. Never turn the machine upside down.
14. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
15. Do not place on or near a hot gas or electric burner, or in a heated oven.
16. Do not put fingers under the outlet during beverage preparation.
17. Do not touch the injector of the machine head.
18. Never carry the appliance by the extraction head.
19. The capsule holder is equipped with a permanent magnet. Avoid placing the capsule holder near appliances and objects that can be damaged by magnetism, e.g. credit cards, USB drives and other data devices, video tapes, television and computer monitors with picture tubes, mechanical clocks, hearing aids and loud speakers.
20. Do not turn off the appliance during the descaling process. Rinse the water tank and clean the appliance to avoid any residual descaling agent.
21. If away for prolonged periods, on holiday, etc. the appliance must be emptied, cleaned and unplugged. Rinse before reuse. Operate the rinse cycle before re-using your appliance.
22. We recommend using the NESCAFÉ® Dolce Gusto® capsules designed and tested for the NESCAFÉ® Dolce Gusto® machine. They were designed to interact together – the interaction provides the in-cup quality that NESCAFÉ® Dolce Gusto® is known for. Each capsule is designed to prepare a perfect cup, and cannot be reused.
23. Do not remove hot capsules by hand. Always use capsule holder handle to dispose of used capsules.
24. Always insert the capsule holder in the machine to prepare a beverage. The appliance will not work if the capsule holder is not inserted. Do not pull out the capsule holder before the indicator stops blinking.
25. Machines equipped with a locking handle: scalding may occur if the locking handle is opened during the brewing cycles. Do not pull up the locking handle before the lights on the machine stop flashing.



26. For health reasons, always fill the water tank with fresh drinking water.
27. After use of the appliance always remove the capsule and clean the capsule holder. Empty and clean the drip tray and capsule bin daily. Food allergy sufferers must rinse the appliance according to cleaning procedure.
28. The heating element surface is subject to residual heat after use and plastic housings may feel warm to touch several minutes upon use.
29. Patients with pacemakers or defibrillators: do not hold the capsule holder directly over the pacemaker or defibrillator.
30. The appliance shall not be placed in a cabinet when in use.



CHILDREN

31. Keep the appliance and its cord out of reach of children aged less than 8 years. Children shall not play with the appliance.
32. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
33. This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Persons who have a limited or no understanding of the operation and use of this appliance must first read and fully understand the contents of the user manual, and where appropriate seek additional guidance on its operation and use from the person responsible for their safety.
34. Children should be supervised to ensure that they do not play with the appliance.
35. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised by an adult.
36. Children should not use the appliance as a toy.

MAINTENANCE

37. Unplug from the mains power socket before cleaning. Allow to cool before putting on or taking off parts, before cleaning the appliance. Never clean wet or immerse appliance in any fluid. Never clean the appliance with running water. Never use detergents to clean the appliance. Clean the appliance only using soft sponges/brushes. The water tank should be cleaned with a clean food-safe brush.

38. Any operation, cleaning and care other than normal use must be undertaken by after-sales service centres designated by the NESCAFÉ® Dolce Gusto® hotline. Do not dismantle appliance and do not put anything into openings.
39. To reduce the risk of fire or electric shock, do not remove the cover, No user serviceable parts inside. Repair should be done by authorized service personnel only!
40. For additional guidance on how to use the appliance, refer to the user manual on www.dolce-gusto.com or call the NESCAFÉ® Dolce Gusto® hotline number.



 
RECYCLING

41. Packaging is made of recyclable materials. Contact your local council / authority for further information on recycling programs. Your appliance contains valuable materials which can be recovered or recycled.

EUROPEAN MARKETS ONLY: Think of the environment!



Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point or at an approved service centre, where it will be disposed of properly. European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), stipulates that used household appliances must not be disposed of in normal unsorted municipal waste. Old appliances must be collected separately to optimise the sorting and recycling of their parts and to reduce the impact on human health and the environment.

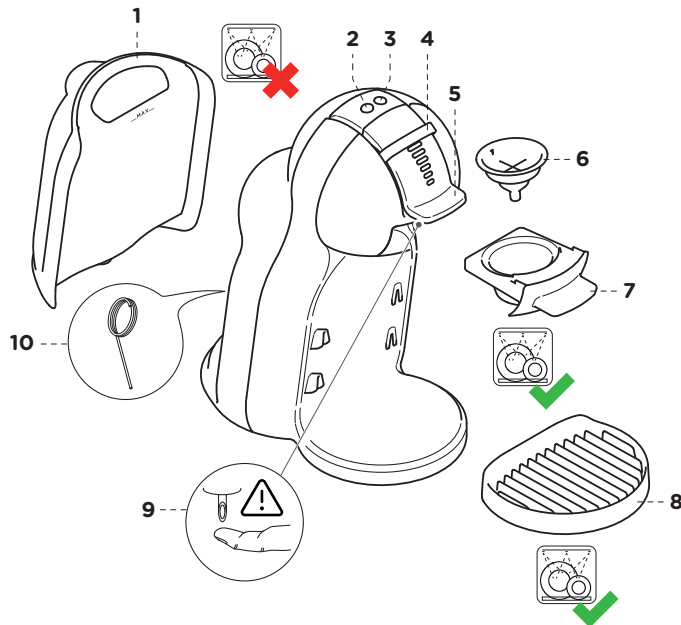


- 1 Water tank
(0.8 L)
- 2 Temperature button
- 3 Start button
- 4 Volume selector
- 5 Locking handle

- 6 Rinsing tool
- 7 Capsule holder
- 8 Drip tray
- 9 Injector
- 10 Cleaning needle

TECHNICAL DATA

	IE / GB: 220 - 240 V, 50/60 Hz, 1340 - 1600 W		
	Consumption in Standby mode: < 0.1 W		
	Standby mode activation: 1 minute after the preparation of a beverage. 5 minutes after switch-on if no other action is taken.		
	Weight: ~2.5 kg		Operating temperatures: 5 - 45 °C / 41 - 113 °F
P	Pump pressure: 15 bar		Dimensions: A = 16 cm B = 30.50 cm C = 24 cm



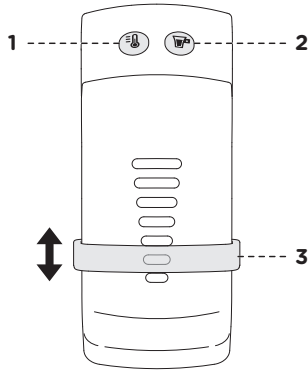 

1 Hot and cold selection

The beverage temperature can be set (2 predefined settings):



Cold



Hot

After switch on, the temperature is automatically set to "Hot" during the heat up process. For cold selection, see the "HOW TO SELECT COLD MODE" section on pages 9.

 
2 Start button

Start/Stop the beverage preparation


3 Volume selector

Seven positions for volume selection


HOW TO START THE MACHINE

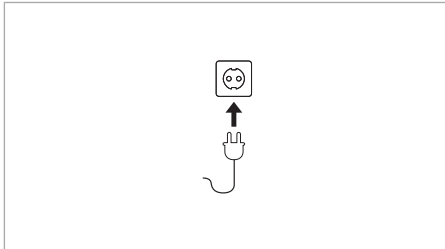

 - 1 Ensure to use the correct mains voltage as given in "TECHNICAL DATA" on page 7. Connect the power plug to the mains power socket.

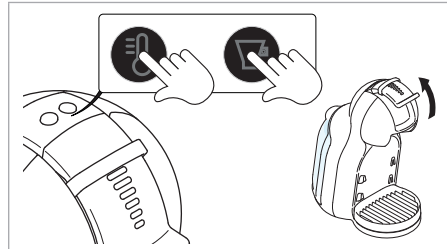

 - 2 To start the machine, press the temperature button or the start button, or open the locking handle.

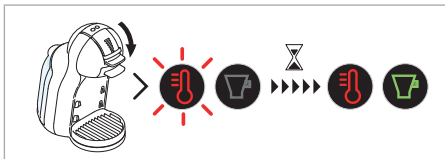


- 3 Close the locking handle. The temperature button starts blinking while the machine is heating up for approximately 40 seconds. Afterwards, the temperature button turns steady red. The start button turns steady green. The machine is ready to be used.




HOW TO SELECT COLD MODE

 Option A: the machine is switched off.

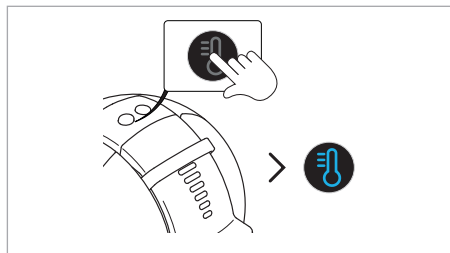


Press the temperature button to start the machine in cold mode. A cold beverage can be prepared immediately.

 i The cold mode must only be used with dedicated cold products, e. g. Iced Frappé.

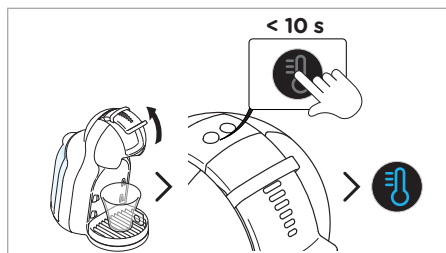


If you open the locking handle first, the machine switches on automatically. Press the temperature button within 10 seconds after starting the machine to change to cold mode (blue). A cold beverage can be prepared immediately.

 
Option B: a hot beverage has been prepared or the cold mode was not selected within 10 seconds after starting the machine.

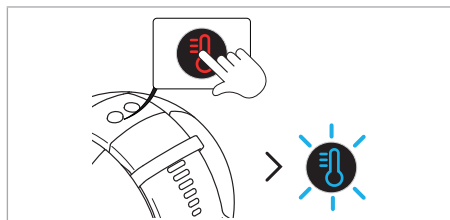

 1 Press the temperature button to go into cold mode. The temperature selection button will blink blue to indicate that the machine needs to cool down.

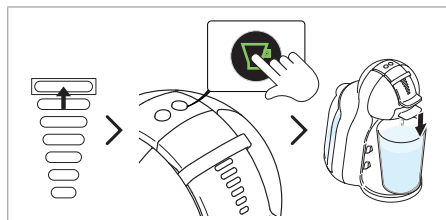

 2 To accelerate the cooling, select level 7 on the bar display and place a large empty container underneath the coffee outlet. Press the start button. The machine starts rinsing.

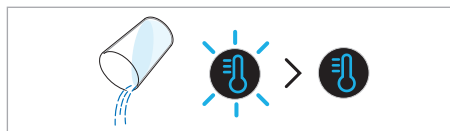

3 Empty the container. The temperature selection button is steady blue to indicate that the machine is cooled down and a cold beverage can be prepared.



MACHINE STATUS OVERVIEW

	Steady Blue	Cold function ready
	Flashing Blue	Cold function activated but the water temperature is still too high
	Steady Red	Hot function ready
	Flashing Red	Heating up
		Technical error
	Steady Green	Ready for beverage preparation, during beverage preparation or beverage preparation completed
	Flashing Green	Top up time for beverage preparation For a longer cup, press the start button again During flashing, do not open the locking handle
	Steady Orange	The machine needs to be descaled
	Flashing Orange	Descaling mode
	Steady Orange Flashing Green	Descaling mode (during the waiting time)

